

























Environmental Suicide Risk Assessment Report


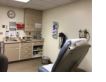




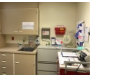






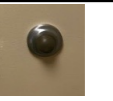
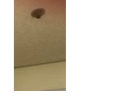


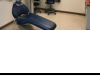Western State (Building 29)

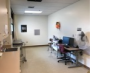







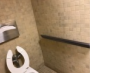




Lakewood, WA













7/9/2018 to 7/10/2018





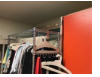








Space	Classification	Room	Observed Potential Suicide Risk	Potential Mitigation Activities	Risk
BH Recreation, Outdoor	BH Common Area	All Patio doors	Other attachment points (Ligature): Door handles standard: no picture as would have included patients in picture	Provide ligature-resistant devices or covers Remove attachment points Direct observation of group	H
BH Outpatient Counseling Room	BH Common Area	Chapel	Blinds or shades, exposed, and cords (Ligature)	One-to-one observation	L 
BH Outpatient Counseling Room	BH Common Area	Chapel	Door closer, and hinges exposed (Ligature)	One-to-one observation	L 
BH Outpatient Counseling Room	BH Common Area	Chapel	Other attachment points (Ligature): Lights Heater and associated piping Conduit Cross hanging from ceiling with chains Sprinkler piping	One-to-one observation	L  
BH Outpatient Counseling Room	BH Common Area	Chapel	Screws, non-tamper-resistant (Ligature, Harm)	One-to-one observation	L 
BH Outpatient Activity Room	BH Common Area	Clinic Dental	Ceiling, lay-in (Ligature, Contraband)	Screen patients for appropriate setting Direct observation of group	L 
BH Outpatient Activity Room	BH Common Area	Clinic Dental	Door handle, standard (Ligature): Door closure exposed	Screen patients for appropriate setting Replace with ligature-resistant door handle Direct observation of group	L 
BH Outpatient Activity Room	BH Common Area	Clinic Dental	Faucet, standard (Ligature)	Screen patients for appropriate setting Replace with ligature-resistant faucet Direct observation of group	L 
BH Outpatient Activity Room	BH Common Area	Clinic Dental	Hooks, fixed (Ligature)	Screen patients for appropriate setting Remove hooks Replace with ligature-resistant hooks Direct observation of group	L 













Space	Classification	Room	Observed Potential Suicide Risk	Potential Mitigation Activities	Risk	
BH Outpatient Activity Room	BH Common Area	Clinic Dental	Shelves, and cabinets wall mounted (Ligature)	Screen patients for appropriate setting Remove wall mounted shelves Direct observation of group	L	
BH Outpatient Corridor	BH Common Area	Clinic Laboratory Corridor	Other attachment points (Ligature): Specimen boxes and shelf	Provide ligature-resistant devices or covers Remove attachment points Direct observation of group	L	
BH Outpatient Corridor	BH Common Area	Clinic Medical	Ceiling, lay-in (Ligature, Contraband)	Screen patients for appropriate setting Direct observation of group	L	
BH Outpatient Corridor	BH Common Area	Clinic Medical	Door handle, and hinges standard (Ligature)	Screen patients for appropriate setting Replace with ligature-resistant door handle Direct observation of group	L	
BH Outpatient Corridor	BH Common Area	Clinic Medical	Exit signs not flush to ceiling or wall (Ligature)	Screen patients for appropriate setting Mount exit signs flush to ceiling or wall Direct observation of group	L	
BH Outpatient Corridor	BH Common Area	Clinic Medical	Other attachment points (Ligature): Nurse call light Scale	Provide ligature-resistant devices or covers Remove attachment points Direct observation of group	L	
BH Outpatient Corridor	BH Common Area	Clinic Medical	Pictures, artwork, boards, wall mounted (Ligature, Harm): Wooden racks	Screen patients for appropriate setting Secure flush to wall with tamper-resistant screws Unbreakable glass or acrylic Direct observation of group	L	
BH Outpatient Activity Room	BH Common Area	Clinic Medical Exam rooms all	Ceiling, lay-in (Ligature, Contraband)	Screen patients for appropriate setting Direct observation of group	L	
BH Outpatient Exam Room	BH Common Area	Clinic Medical Exam rooms all	Dispenser, paper towel, breakable (Harm)	One-to-one observation	L	
BH Outpatient Exam Room	BH Common Area	Clinic Medical Exam rooms all	Faucet, standard (Ligature)	One-to-one observation	L	
BH Outpatient Exam Room	BH Common Area	Clinic Medical Exam rooms all	Hinges, standard (Ligature)	One-to-one observation	L	
BH Outpatient Activity Room	BH Common Area	Clinic Medical Exam rooms all	Hinges, standard (Ligature)	Screen patients for appropriate setting Replace with continuous hinges Direct observation of group	L	
BH Outpatient Exam Room	BH Common Area	Clinic Medical Exam rooms all	Hooks, fixed (Ligature): Lead apron racks	One-to-one observation	L	

















Space	Classification	Room	Observed Potential Suicide Risk	Potential Mitigation Activities	Risk	
BH Outpatient Exam Room	BH Common Area	Clinic Medical Exam rooms all	Other attachment points (Ligature): Same as other exam rooms	One-to-one observation	L	 
BH Outpatient Exam Room	BH Common Area	Clinic Medical Exam rooms all	Other attachment points (Ligature): Same findings as other exam rooms	One-to-one observation	L	 
BH Outpatient Exam Room	BH Common Area	Clinic Medical Exam rooms all	Other attachment points (Ligature): Same findings as other exam rooms.	One-to-one observation	L	 
BH Outpatient Activity Room	BH Common Area	Clinic Medical Exam rooms all	Other attachment points (Ligature): Sharps wall mounts Glove holders wall mounted Medical equipment: cart, chair, x-ray equipment	Screen patients for appropriate setting Provide ligature-resistant devices or covers Remove attachment points Direct observation of group	L	 
BH Outpatient Exam Room	BH Common Area	Clinic Medical Exam rooms all	Privacy curtain, non-breakaway (Ligature): All the curtains have metal chains instead of mesh.	One-to-one observation	L	
BH Outpatient Bathroom	BH Common Area	Clinic Medical Room # 152	Dispenser, paper towel, breakable (Harm)	Screen patients for appropriate setting One-to-one observation	L	
BH Outpatient Bathroom	BH Common Area	Clinic Medical Room # 152	Electrical outlets, non-tamper-resistant (Harm)	Screen patients for appropriate setting Provide tamper-resistant electrical outlets One-to-one observation	L	
BH Outpatient Bathroom	BH Common Area	Clinic Medical Room # 152	Other attachment points (Ligature): Seat cover dispenser Toilet flush piping Grab bars Metal hooks on the wall Mirror	Screen patients for appropriate setting Provide ligature-resistant devices or covers Remove attachment points One-to-one observation	L	 
BH Outpatient Bathroom	BH Common Area	Clinic Medical Room # 152	Other attachment points (Ligature): Door stop	Screen patients for appropriate setting Provide ligature-resistant devices or covers Remove attachment points One-to-one observation	L	
BH Outpatient Bathroom	BH Common Area	Clinic Medical Room # 152	Sprinkler heads, standard (Ligature)	Screen patients for appropriate setting Replace with ligature-resistant sprinkler heads One-to-one observation	L	
BH Outpatient Activity Room	BH Common Area	Clinic PT Gym, Rehab	Dispenser, paper towel, breakable (Harm)	Screen patients for appropriate setting Replace with unbreakable dispenser Direct observation of group	L	 


















Space	Classification	Room	Observed Potential Suicide Risk	Potential Mitigation Activities	Risk	
BH Outpatient Activity Room	BH Common Area	Clinic PT Gym, Rehab	Door closer, exposed (Ligature)	Screen patients for appropriate setting Remove door closer Direct observation of group	L	
BH Outpatient Activity Room	BH Common Area	Clinic PT Gym, Rehab	Door handle, standard (Ligature)	Screen patients for appropriate setting Replace with ligature-resistant door handle Direct observation of group	L	
BH Outpatient Activity Room	BH Common Area	Clinic PT Gym, Rehab	Exercise equipment (Ligature)	Screen patients for appropriate setting Direct observation of group	L	 
BH Outpatient Activity Room	BH Common Area	Clinic PT Gym, Rehab	Faucet, standard (Ligature)	Screen patients for appropriate setting Replace with ligature-resistant faucet Direct observation of group	L	 
BH Outpatient Activity Room	BH Common Area	Clinic PT Gym, Rehab	Fire extinguisher cabinet, protruding (Ligature)	Screen patients for appropriate setting Provide recessed extinguisher cabinet Direct observation of group	L	
BH Outpatient Activity Room	BH Common Area	Clinic PT Gym, Rehab	Hinges, standard (Ligature) Doors Cabinets	Screen patients for appropriate setting Replace with continuous hinges Direct observation of group	L	 
BH Outpatient Activity Room	BH Common Area	Clinic PT Gym, Rehab	Other attachment points (Ligature): Water fountain Shelving Hand rail Various rehab equipment	Screen patients for appropriate setting Provide ligature-resistant devices or covers Remove attachment points Direct observation of group	L	 
BH Outpatient Activity Room	BH Common Area	Clinic PT Gym, Rehab	Bulletin boards, and hooks wall mounted (Ligature, Harm)	Screen patients for appropriate setting Secure flush to wall with tamper-resistant screws Unbreakable glass or acrylic Direct observation of group	L	
BH Outpatient Activity Room	BH Common Area	Clinic PT Gym, Rehab	Cabinets, handles and hinges (Ligature)	Screen patients for appropriate setting Replace with ligature-resistant cabinet handles Direct observation of group	L	 
BH Corridor	BH Common Area	Corridor going to Chapel	Ceiling, lay-in (Ligature, Contraband)	Replace with hard ceiling Glue or clip tiles in place Place motion sensor above ceiling One-to-one observation	H	
BH Corridor	BH Common Area	Corridor going to Chapel	Hand rails, open (Ligature)	Provide ligature-resistant hand rails One-to-one observation	H	




















Space	Classification	Room	Observed Potential Suicide Risk	Potential Mitigation Activities	Risk	
BH Corridor	BH Common Area	Corridor going to Chapel	Other attachment points (Ligature)	Provide ligature-resistant devices or covers Remove attachment points Direct observation of group	H	
BH Activity Room	BH Common Area	E- TRC Store Room	Diffuser, wide openings (Ligature)	Provide cover with small openings Direct observation of group	M	
BH Activity Room	BH Common Area	E- TRC Store Room	Door closer, exposed (Ligature)	Remove door closer Direct observation of group	M	
BH Activity Room	BH Common Area	E- TRC Store Room	Door knob and hinges, standard (Ligature)	Replace with ligature-resistant door handle Direct observation of group	M	
BH Activity Room	BH Common Area	E- TRC Store Room	Faucet, standard (Ligature)	Replace with ligature-resistant faucet Direct observation of group	M	
BH Activity Room	BH Common Area	E- TRC Store Room	Other attachment points (Ligature) Metal shelves Carts	Provide ligature-resistant devices or covers Remove attachment points Direct observation of group	M	 
BH Day Room	BH Common Area	E1 Day	Other attachment points (Ligature): Wood rack Heater vent grill No picture due to patients	Provide ligature-resistant devices or covers Remove attachment points Direct observation of group	M	
BH Patient Room	BH Dedicated Space	E1- 133, 139, 140, 142, 145, 149, 159, 161, 162, 164, 166, 167, 168, 169, 171; E7- 142, 128, 126, 125, 123	Other attachment points (Ligature): Clothes locker gaps Clothes locker lower cabinet door	Provide ligature-resistant devices or covers Remove attachment points One-to-one observation	H	 
BH Patient Room	BH Dedicated Space	E1- 134	Bed, BH, with attachment points for restraints (Ligature)	Remove the restraint attachment points One-to-one observation	H	
BH Patient Room	BH Dedicated Space	E1- 141, 136, 133; E7- 111, 133, 137, 125, 122, 123; E5- 112, 113, 115, 116, 120, 122, 148, 145, 142, 135, 139, 133; E3- 112, 115, 122, 116, 128, 120, 122, 123, 135, 137, 139, 140, 142, 143, 145, 146	Bed, hospital, or open side rails (Ligature)	Use hospital beds only if medically necessary Provide solid headboard, footboard, and side rails Provide covers for headboard, footboard, and side rails One-to-one observation	H	 













Space	Classification	Room	Observed Potential Suicide Risk	Potential Mitigation Activities	Risk	
BH Shower, Corridor	BH Dedicated Space	E1- 152, 163	Shower head (Ligature)	Replace with ligature-resistant shower head One-to-one observation	H	
BH Shower, Corridor	BH Dedicated Space	E1- 163, 152, 146; E5- 113, 119	Other attachment points (Ligature): Heater	Provide ligature-resistant devices or covers Remove attachment points One-to-one observation	H	
BH Shower, Corridor	BH Dedicated Space	E1- 163, 152; E7- 146, 134, 131, 119; E5- 146, 120, 122	Grab bars, gaps (Ligature)	Replace with ligature-resistant grab bars One-to-one observation	H	 
BH Exam Room	BH Common Area	E1- A125	Ceiling, lay-in (Ligature, Contraband)	One-to-one observation	H	
BH Exam Room	BH Common Area	E1- A125	Dispenser, paper towel, breakable (Harm)	One-to-one observation	M	
BH Exam Room	BH Common Area	E1- A125	Faucet, standard (Ligature)	One-to-one observation	H	
BH Exam Room	BH Common Area	E1- A125	Hinges, cabinet standard (Ligature)	One-to-one observation	H	
BH Exam Room	BH Common Area	E1- A125	Hooks, fixed (Ligature)	One-to-one observation	H	
BH Exam Room	BH Common Area	E1- A125	Medical equipment (Ligature) Cart Exam light Table Wall BP Privacy curtain, rolling	Remove equipment not medically necessary Cover medical equipment One-to-one observation	H	
BH Exam Room	BH Common Area	E1- A125	Oxygen cylinder and mount (Harm)	Remove cylinder if not medically necessary One-to-one observation	H	
BH Exam Room	BH Common Area	E1- A125	Pictures, artwork, boards, wall mounted (Ligature, Harm): Bulletin board	One-to-one observation	H	
BH Exam Room	BH Common Area	E1- A125	Shelves, wall mounted and floor (Ligature): Desk wall mounted	Remove wall mounted shelves One-to-one observation	H	
















Space	Classification	Room	Observed Potential Suicide Risk	Potential Mitigation Activities	Risk	
BH Corridor	BH Common Area	E1- A129 and 145	Door closer, exposed (Ligature)	Remove door closer One-to-one observation	H	
BH Corridor	BH Common Area	E1- A129 and 145	Exit signs not flush to ceiling or wall (Ligature)	Mount exit signs flush to ceiling or wall One-to-one observation	H	
BH Corridor	BH Common Area	E1- A129, 145; E2- 245	Conduit, exposed (Ligature)	Remove or enclose conduit One-to-one observation	H	
BH Corridor	BH Common Area	E1- A129,145; E2- 245	Door handle, standard (Ligature) Fire alarm pull station	Replace with ligature-resistant door handle One-to-one observation	H	
BH Patient Room	BH Dedicated Space	E1- A144	Other attachment points (Ligature): Hole through door	Provide ligature-resistant devices or covers Remove attachment points One-to-one observation	H	
BH Bathroom, Corridor	BH Dedicated Space	E1- Toilets; E5-131	Other attachment points (Ligature): Access panels	Provide ligature-resistant devices or covers Remove attachment points One-to-one observation	H	
BH Bathroom, Corridor	BH Dedicated Space	E1- Toilets; E7- 119; E5- 121, 122	Other attachment points (Ligature): Hand dryer gaps	Provide ligature-resistant devices or covers Remove attachment points One-to-one observation	H	
BH Patient Room	BH Dedicated Space	E1- Toilets; E7- 139,133, 131; E5- 112, 120, 122, 123; E3- 115, 116	Other attachment points (Ligature): Door stop	Provide ligature-resistant devices or covers Remove attachment points One-to-one observation	H	 
BH Patient Room	BH Dedicated Space	E1-133, 134, 136, 137, 139, 140, 142, 144, 147, 149, 159, 161, 162, 164, 166, 167, 168, 169, 171; E7-119, 123-146; E5- 110, 112, 113, 118, 120, 148, 146, 145, 140, 133, 135, 139, 137, 131; E3- 112, 113, 116, 122, 123, 135, 143, 145, 146	Sprinkler heads, standard (Ligature)	Replace with ligature-resistant sprinkler heads One-to-one observation	H	
BH Day Room	BH Common Area	E1-A157	Blinds or shades, exposed, and cords (Ligature): Blind mounts	Remove exposed blinds or shades and/or cords Direct observation of group	M	
BH Patient Room	BH Dedicated Space	E1-Toilets, 134, 136; E7 -115-146; E5- 120; E3 -112, 113, 115, 116, 118, 120	Lamp, attachment (Ligature): Round lights	Provide angled or recessed lamp One-to-one observation	H	















Space	Classification	Room	Observed Potential Suicide Risk	Potential Mitigation Activities	Risk	
BH Recreation, Outdoor	BH Common Area	E1; E2; E3; E4; E5; E6; E7 Patio	Other attachment points (Ligature): Security camera housing	Provide ligature-resistant devices or covers Remove attachment points Direct observation of group	H	
BH Corridor	BH Common Area	E1; E2; E3; E4; E5; E6; E7; E8	Ceiling, lay-in (Ligature, Contraband)	Replace with hard ceiling Glue or clip tiles in place Place motion sensor above ceiling One-to-one observation	H	
BH Corridor	BH Common Area	E1; E2; E3; E4; E5; E6; E7; E8	Door closer, exposed (Ligature) Hinges	Remove door closer One-to-one observation	H	
BH Corridor	BH Common Area	E1; E2; E3; E4; E5; E6; E7; E8	Exit signs not flush to ceiling or wall (Ligature)	Mount exit signs flush to ceiling or wall One-to-one observation	H	
BH Corridor	BH Common Area	E1; E2; E3; E4; E5; E6; E7; E8	Other attachment points (Ligature): Convex mirrors Pendent alarm boxes	Provide ligature-resistant devices or covers Remove attachment points Direct observation of group	H	 
BH Corridor	BH Common Area	E1; E2; E3; E4; E5; E6; E7; E8	Pictures, artwork, boards, wall mounted (Ligature, Harm): Bulletin boards White boards	Secure flush to wall with tamper-resistant screws Unbreakable glass or acrylic One-to-one observation	H	 
BH Corridor	BH Common Area	E1; E2; E3; E4; E5; E6; E7; E8 Corridor	Hand rails, open (Ligature)	Provide ligature-resistant hand rails One-to-one observation	H	 
BH Recreation, Outdoor	BH Common Area	E1; E2; E4; E5; E6; E7; E8- Patio	Conduit, exposed (Ligature):	Enclose conduit Mount conduit flush to wall Direct observation of group	H	 
BH Recreation, Outdoor	BH Common Area	E1; E2; E4; E5; E6; E7; E8- Patio	Lamp, attachment (Ligature)	Provide angled or recessed lamp Direct observation of group	H	
BH Recreation, Outdoor	BH Common Area	E1; E3; E5; E7- Patio	Fencing (Ligature, Contraband, Elopement) and Bars	Eliminate attachment points Ensure no cords are present Ensure appropriate fence height Angle fence inward at top Install fence tight to ground Direct observation of group	H	 
BH Corridor	BH Common Area	E1; E7; E8 Corridor	Nurse call lights, wall mounted (Ligature)	Mount nurse call lights on the ceiling One-to-one observation	H	














Space	Classification	Room	Observed Potential Suicide Risk	Potential Mitigation Activities	Risk	
BH Recreation, Outdoor	BH Common Area	E1; E8; E6; E3 Patio	Other attachment points (Ligature): Drain pipes (E1; E8; 6; E3) Sprinkler pipes (E8; E6)	Provide ligature-resistant devices or covers Remove attachment points Direct observation of group	H	 
ED BH Patient Room	BH Dedicated Space	E2- 233, 234	Lamp, attachment (Ligature): Gaps	Provide angled or recessed lamp One-to-one observation	H	
ED BH Patient Room	BH Dedicated Space	E2- 233, 237, 245, 248, 269, 270, 271, 261, 263, 264, 266, 271	Other attachment points (Ligature): Clothes locker gaps at top corners CPAP hinges	Provide ligature-resistant devices or covers Remove attachment points One-to-one observation	H	 
BH Bathroom, Corridor	BH Dedicated Space	E2- 234, 268	Grab bars (Ligature): Bars too short	Replace with ligature-resistant grab bars One-to-one observation	H	
BH Bathroom, Corridor	BH Dedicated Space	E2- 234, 268	Other attachment points (Ligature): Access panel	Provide ligature-resistant devices or covers Remove attachment points One-to-one observation	H	
ED BH Patient Room	BH Dedicated Space	E2- 236, 237, 268	Bed, BH, with attachment points for restraints (Ligature)	Remove the restraint attachment points if not in use One-to-one observation	H	
ED BH Patient Room	BH Dedicated Space	E2- 239	Bed, hospital, (Ligature)	Use hospital beds only if medically necessary Provide solid headboard, footboard, and side rails Provide covers for headboard, footboard, and side rails One-to-one observation	H	 
ED BH Patient Room	BH Dedicated Space	E2- 239, 236, 237, 241, 242	Other attachment points (Ligature): 239: Door stop 236, 237, 241, 242: Heater grill	Provide ligature-resistant devices or covers Remove attachment points One-to-one observation	H	 
ED BH Patient Room	BH Dedicated Space	E2- 240	Beds, with drawers (Ligature)	Provide ligature resistant clothes lockers One-to-one observation	H	
ED BH Patient Room	BH Dedicated Space	E2- 241, 242	Pictures, artwork, boards, wall mounted (Ligature, Harm): White boards	Secure flush to wall with tamper-resistant screws Unbreakable glass or acrylic One-to-one observation	H	
BH Corridor	BH Common Area	E2- 245	Door handle, standard and loose (Ligature)	Replace with ligature-resistant door handle One-to-one observation	H	
ED BH Patient Room	BH Dedicated Space	E2- 250, 268	Door handle, loose (Ligature): 250: Door strike plate loose and damaged	Replace with ligature-resistant door handle One-to-one observation	H	 
















Space	Classification	Room	Observed Potential Suicide Risk	Potential Mitigation Activities	Risk	
ED BH Patient Room	BH Dedicated Space	E2- all patient rooms	Other attachment points (Ligature): Sprinklers are not tamper resistant in all rooms but 234, 261	Provide ligature-resistant devices or covers Remove attachment points Make tamper resistant One-to-one observation	H	
BH Corridor	BH Common Area	E2; E1	Other attachment points (Ligature): Washer dryer connections cover (E2) E1 no cover over connections	Provide ligature-resistant devices or covers Remove attachment points Direct observation of group	H	 
BH Exam Room	BH Common Area	E2; E4- 268; E6- 268; E8	Dispenser, paper towel, breakable (Harm)	One-to-one observation	M	 
BH Exam Room	BH Common Area	E2; E4- 268; E6- 268; E8	Ceiling, lay-in (Ligature, Contraband)	One-to-one observation	H	 
BH Exam Room	BH Common Area	E2; E4-268; E6- 268; E8	Cabinets, hinges (Ligature)	One-to-one observation	H	 
BH Exam Room	BH Common Area	E2; E4-268; E6- 268; E8	Door handle, standard (Ligature)	One-to-one observation	H	 
BH Exam Room	BH Common Area	E2; E4-268; E6- 268; E8	Hooks, fixed (Ligature) and nurse call cover and hooks holding blue chairs	One-to-one observation	H	 
BH Exam Room	BH Common Area	E2; E4-268; E6- 268; E8	Other attachment points (Ligature): Door window shade knob	Remove attachment points as feasible One-to-one observation	H	 
BH Recreation, Outdoor	BH Common Area	E2; E4; E6; E8- Patio	Fencing (Ligature, Contraband, Elopement) and Rails	Eliminate attachment points Ensure no cords are present Ensure appropriate fence height Angle fence inward at top Install fence tight to ground Direct observation of group	H	
BH Bathroom, Corridor	BH Dedicated Space	E2; E4; E6; E8- Showers/Bathing	Other attachment points (Ligature) Heaters	Provide ligature-resistant devices or covers Remove attachment points One-to-one observation	H	 
BH Exam Room	BH Common Area	E2; E6- 268; E8	Faucet, standard (Ligature)	One-to-one observation	H	














Space	Classification	Room	Observed Potential Suicide Risk	Potential Mitigation Activities	Risk	
BH Exam Room	BH Common Area	E2; E6- 268; E8	Medical equipment (Ligature): Exam light Cart Table Wall BP and otoscope Portable chairs X-ray viewer	Remove equipment not medically necessary Cover medical equipment One-to-one observation	H	
BH Exam Room	BH Common Area	E2; E6- 268; E8	Oxygen cylinder (Harm)	Remove cylinder if not medically necessary One-to-one observation	H	
BH Day Room	BH Common Area	E3 Day	Other attachment points (Ligature): Ceiling mounted projector screen No picture due to patients	Provide ligature-resistant devices or covers Remove attachment points Direct observation of group	M	
BH Patient Room	BH Dedicated Space	E3- 122, 123, 135, 137, 139, 140, 145, 146	Other attachment points (Ligature): Bathroom door latch and screwed shut	Provide ligature-resistant devices or covers Remove attachment points One-to-one observation	H	
BH Exam Room	BH Common Area	E4	Faucet, standard (Ligature) Paper towel shelf	One-to-one observation	H	
BH Corridor	BH Common Area	E4 Corridor	Fire extinguisher cabinet, protruding (Ligature)	Provide recessed extinguisher cabinet One-to-one observation	M	
BH Corridor	BH Common Area	E4 Corridor	Other removable objects (Harm): White box Metal box at exit	Permanently attach or remove objects Direct observation of group	H	
BH Corridor	BH Common Area	E4 Corridor	Water fountain (Ligature): Cover has a gap at top No photo due to patients	Remove water fountain One-to-one observation	H	
BH Recreation, Outdoor	BH Common Area	E4 Patio	Other attachment points (Ligature): Faucet	Provide ligature-resistant devices or covers Remove attachment points Direct observation of group	H	
BH Patient Room	BH Dedicated Space	E4- 208, 213, 219, 237, 220 bathroom door	Other attachment points (Ligature): Door stops 220: door hinge cap	Provide ligature-resistant devices or covers Remove attachment points One-to-one observation	H	 
BH Patient Room	BH Dedicated Space	E4- 211, 213, 212, 237	Door handle, loose (Ligature): 211: door key lock loose	Replace with ligature-resistant door handle One-to-one observation	H	 








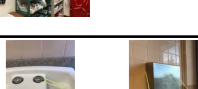










Space	Classification	Room	Observed Potential Suicide Risk	Potential Mitigation Activities	Risk	
BH Patient Room	BH Dedicated Space	E4- 216	Other attachment points (Ligature): Convex mirror over diffuser/vent	Provide ligature-resistant devices or covers Remove attachment points One-to-one observation	H	
BH Patient Room	BH Dedicated Space	E4- 216, 217, 241, 239, 251, 237, 233, 222, 224	Door strike plate loose (Ligature):	Start a routine door maintenance program or during EOC rounds. One-to-one observation	H	
BH Bathroom, Corridor	BH Dedicated Space	E4- 219, 213, 208	Grab bars, open (Ligature): Gaps	Replace with ligature-resistant grab bars One-to-one observation	H	 
BH Patient Room	BH Dedicated Space	E4- 245, 246, 243, 242, 240, 239, 222, 223, 233, 235, 237	Other attachment points (Ligature): Clothes locker gaps at top corners	Provide ligature-resistant devices or covers Remove attachment points One-to-one observation	H	
BH Patient Room	BH Dedicated Space	E4- 248	Sprinkler heads, standard (Ligature)	Replace with ligature-resistant sprinkler heads One-to-one observation	H	
BH Patient Room	BH Dedicated Space	E4- 249, 248, 246, 245, 243, 242, 239, 237, 235, 233, 222	Lamp, attachment (Ligature): Gap between fixture and ceiling	Provide angled or recessed lamp One-to-one observation	H	
BH Patient Room	BH Dedicated Space	E4- 249, 252	Bed, BH, with attachment points for restraints (Ligature)	Remove the restraint attachment points One-to-one observation	H	
BH Patient Room	BH Dedicated Space	E4- 259	Other attachment points (Ligature): Convex mirror not flush to ceiling	Provide ligature-resistant devices or covers Remove attachment points One-to-one observation	H	
BH Exam Room	BH Common Area	E4- 268	Medical equipment (Ligature): Exam light Wall BP and otoscope Exam table Desk Portable monitor Cart	Remove equipment not medically necessary Cover medical equipment One-to-one observation	H	 
BH Patient Room	BH Dedicated Space	E4- All patient rooms	Other attachment points (Ligature): Heaters (all rooms have wall heaters that have a cover with gaps)	Provide ligature-resistant devices or covers Remove attachment points One-to-one observation	H	
BH Patient Bathroom	BH Dedicated Space	E4-219, 213, 208; E2- 272, 238, 249, 267; E6- all bathrooms	Dispenser, paper towel, breakable (Harm)	Replace with unbreakable dispenser One-to-one observation	H	
BH Patient Bathroom	BH Dedicated Space	E4-219, 213, 208; E2- 272, 238, 249, 267; E6- all bathrooms	Grab bars, gaps (Ligature):	Replace with ligature-resistant grab bars One-to-one observation	H	 














Space	Classification	Room	Observed Potential Suicide Risk	Potential Mitigation Activities	Risk	
BH Patient Bathroom	BH Dedicated Space	E4-219, 213, 208; E2-272, 238, 249, 267; E6-all bathrooms	Lamp, attachment (Ligature): Round lights	Provide angled or recessed lamp One-to-one observation	H	
BH Patient Bathroom	BH Dedicated Space	E4-219, 213, 208; E2-272, 238, 249, 267; E6-all bathrooms	Mirror, not flush to wall (Harm)	Replace with unbreakable mirror One-to-one observation	H	
BH Patient Bathroom	BH Dedicated Space	E4-219, 213, 208; E2-272, 238, 249, 267; E6-all bathrooms	Other removable objects (Harm): Flush piping cover Metal shelf	Permanently attach or remove objects One-to-one observation	H	 
BH Patient Bathroom	BH Dedicated Space	E4-219, 213, 208; E2-272, 238, 249, 267; E6-all bathrooms	Sink, faucets (Ligature)	Replace with ligature-resistant faucets	H	
BH Activity Room	BH Common Area	E4-225 Token Store	Faucet, standard (Ligature) and paper towel	Replace with ligature-resistant faucet Direct observation of group	M	
BH Activity Room	BH Common Area	E4-225 Token Store	Hinges, standard (Ligature) Cabinet	Replace with continuous hinges Direct observation of group	M	
BH Activity Room	BH Common Area	E4-225 Token Store	Other attachment points (Ligature): Refrigerator door with lock and latch Pendent alarm box	Provide ligature-resistant devices or covers Remove attachment points Direct observation of group	M	 
BH Activity Room	BH Common Area	E4-225 Token Store	Sprinkler heads, standard (Ligature)	Replace with ligature-resistant sprinkler heads Direct observation of group	M	
BH Day Room	BH Common Area	E4; E3; E6; E8 Day	Telephone with cord (Ligature)	Provide wall phone with slanted top and short cord	H	
BH Day Room	BH Common Area	E4; E6 Day	Other attachment points (Ligature): Clock TV conduit	Provide ligature-resistant devices or covers Remove attachment points Direct observation of group	M	
BH Group Room	BH Common Area	E5 Group; E3-108	Other attachment points (Ligature) Door window shade knobs	Provide ligature-resistant devices or covers Remove attachment points Direct observation of group	M	
BH Patient Bathroom	BH Dedicated Space	E5- 112, 113, 115, 116, 118, 120, 122, 123; E1-Toilets	Other attachment points (Ligature): Metal seat cover holder	Provide ligature-resistant devices or covers Remove attachment points One-to-one observation	H	












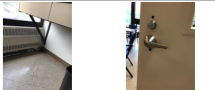
Space	Classification	Room	Observed Potential Suicide Risk	Potential Mitigation Activities	Risk	
BH Shower, Corridor	BH Dedicated Space	E5- 119	Other attachment points (Ligature): Soap dish lip	Provide ligature-resistant devices or covers Remove attachment points One-to-one observation	H	
BH Patient Room	BH Dedicated Space	E5- 120, 137, 149, 113; E5- 112, 115, 118, 116	Door handle, Loose (Ligature): E5- 120, 137, 149, 113; Door strike plate: E5- 112, 115, 118, 116	Replace with ligature-resistant door handle One-to-one observation	H	 
BH Patient Bathroom	BH Dedicated Space	E5- 140	Other attachment points (Ligature): Desk "L" bracket support	Provide ligature-resistant devices or covers Remove attachment points One-to-one observation	H	
BH Patient Room	BH Dedicated Space	E5- 149, 119; E3- 148	Hinges, cap missing (Ligature): 119: shower door corridor 149: bathroom door 148: bathroom	Replace with continuous hinges One-to-one observation	H	
BH Seclusion Room	BH Dedicated Space	E5- 152; E3- 151	Other attachment points (Ligature): Window knobs Convex mirrors Camera cover gaps Windows	Provide ligature-resistant devices or covers Remove attachment points One-to-one observation	H	 
BH Exam Room	BH Common Area	E5- 168	Ceiling, lay-in (Ligature, Contraband)	One-to-one observation	H	
BH Exam Room	BH Common Area	E5- 168	Dispenser, paper towel, breakable (Harm)	One-to-one observation	M	
BH Exam Room	BH Common Area	E5- 168	Faucet, standard (Ligature)	One-to-one observation	H	
BH Exam Room	BH Common Area	E5- 168	Hinges, standard (Ligature) Cabinet	One-to-one observation	H	
BH Exam Room	BH Common Area	E5- 168	Medical equipment (Ligature): Exam lights Wall mounted BP and otoscope Cart Table Portable equipment	Remove equipment not medically necessary Cover medical equipment One-to-one observation	H	
BH Exam Room	BH Common Area	E5- 168	Oxygen cylinder (Harm)	Remove cylinder if not medically necessary One-to-one observation	H	



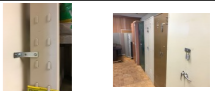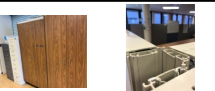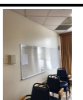







Space	Classification	Room	Observed Potential Suicide Risk	Potential Mitigation Activities	Risk	
BH Exam Room	BH Common Area	E5- 168	Sharps container (Ligature, Harm, Contraband)	Remove sharps container One-to-one observation	H	
BH Exam Room	BH Common Area	E5- 168	Shelves, wall mounted (Ligature)	Remove wall mounted shelves One-to-one observation	H	
BH Shower, Corridor	BH Dedicated Space	E57- 148, 119	Other attachment points (Ligature): Sprinkler	Provide ligature-resistant devices or covers Remove attachment points One-to-one observation	H	
BH Day Room	BH Common Area	E6 Day	Furniture, tables (Ligature): Desk "L" bracket	Replace with tables without attachment points Direct observation of group	M	
BH Laundry Room	BH Common Area	E6- 258; E4-258	Hinges, and handle standard (Ligature) Door closure exposed on corridor side	Prohibit patient access Replace with continuous hinges Direct observation of group	H	
BH Laundry Room	BH Common Area	E6- 258; E4-258	Other attachment points (Ligature) Washer connections	Prohibit patient access Provide ligature-resistant	H	
BH Patient Room	BH Dedicated Space	E7- 139	Sprinkler heads (Ligature)	Replace with ligature-resistant sprinkler heads One-to-one observation	H	
BH Group Room	BH Common Area	E7- 161, 157; E5 and E4- Group; E8- 261	Other attachment points (Ligature): TV cabinet lock, latch, chain	Provide ligature-resistant devices or covers Remove attachment points Direct observation of group	M	 
BH Group Room	BH Common Area	E7- 161, 157; E5 and E4- Group; E8- 261	Pictures, artwork, boards, wall mounted (Ligature, Harm): White boards Bulletin boards	Secure flush to wall with tamper-resistant screws Unbreakable glass or acrylic Direct observation of group	M	 
BH Group Room	BH Common Area	E7- 161, 157; E5 and E4- Group; E8- 261; E6-226	Ceiling, lay-in (Ligature, Contraband)	Replace with hard ceiling Glue or clip tiles in place Place motion sensor above ceiling Direct observation of group	M	
BH Group Room	BH Common Area	E7- 161, 157; E5-Group	Other attachment points (Ligature): TV cabinet lock, latch, chain	Provide ligature-resistant devices or covers Remove attachment points Direct observation of group	M	 
BH Patient Room	BH Dedicated Space	E7- All rooms	Other attachment points (Ligature): Wall lock	Provide ligature-resistant devices or covers Remove attachment points One-to-one observation	H	

Space	Classification	Room	Observed Potential Suicide Risk	Potential Mitigation Activities	Risk	
BH Recreation, Outdoor	BH Common Area	E7- Patio	Other attachment points (Ligature): Hose reel Tree Security Camera	Provide ligature-resistant devices or covers Remove attachment points Direct observation of group	H	
BH Patient Room	BH Dedicated Space	E7-136, 134, 131; E3-115, 116, 120, 122, 123, 135, 137, 139, 140	Pictures, artwork, boards, wall mounted (Ligature, Harm): Bulletin boards	Secure flush to wall with tamper-resistant screws Unbreakable glass or acrylic One-to-one observation	H	
BH Patient Room	BH Dedicated Space	E7-136, 137, 139, 133, 131, 130; E5-131-148	Window, operable (Harm): Knobs and latches	Seal window One-to-one observation	H	
BH Exam Room	BH Common Area	E7-157	Cabinets, hinges (Ligature)	One-to-one observation	H	
BH Conference Room	BH Common Area	E7-157	Cabinets, handles (Ligature): Lock, latch Rolling Cart	Replace with ligature-resistant cabinet handles Direct observation of group	M	
BH Exam Room	BH Common Area	E7-157	Ceiling, lay-in (Ligature, Contraband)	One-to-one observation	H	
BH Exam Room	BH Common Area	E7-157	Conduit, exposed (Ligature): Piping, light, vent, pipe hangers in closet	One-to-one observation	H	
BH Exam Room	BH Common Area	E7-157	Dispenser, paper towel, breakable (Harm)	One-to-one observation	M	
BH Exam Room	BH Common Area	E7-157	Faucet, standard (Ligature)	One-to-one observation	H	
BH Exam Room	BH Common Area	E7-157	Hooks, fixed (Ligature)	One-to-one observation	H	
BH Exam Room	BH Common Area	E7-157	Medical equipment (Ligature): Wall mounted BP, otoscope, O2 mount with chain	Remove equipment not medically necessary Cover medical equipment One-to-one observation	H	
BH Exam Room	BH Common Area	E7-157	Shelves, (Ligature)	Remove wall mounted shelves One-to-one observation	H	
BH Bathroom, Corridor	BH Dedicated Space	E7; E1; E5; E3 all toilets, shower rooms with sinks	Faucet, (Ligature): Also Paper towel dispensers	Replace with ligature-resistant faucet One-to-one observation	H	

Space	Classification	Room	Observed Potential Suicide Risk	Potential Mitigation Activities	Risk		
BH Patient Room	BH Dedicated Space	E7; E3; E5; E1	Other attachment points (Ligature)In room sinks: Light over sink Paper towel dispenser Mirror Sink Faucets	Provide ligature-resistant devices or covers Remove attachment points One-to-one observation	H		
BH Corridor	BH Common Area	E7; E8	Other attachment points (Ligature): Door magnetic hold opens Bell	Provide ligature-resistant devices or covers Remove attachment points Direct observation of group	H		
BH Day Room	BH Common Area	E7; E8; E1; E2; E3; E4; E5; E6 Day	Ceiling, lay-in (Ligature, Contraband)	Replace with hard ceiling Glue or clip tiles in place Place motion sensor above ceiling Direct observation of group	M		
BH Day Room	BH Common Area	E7; E8; E1; E2; E3; E4; E5; E6 Day	Other attachment points (Ligature): TV cabinet lock, latch, chain Piano lock and latch	Provide ligature-resistant devices or covers Remove attachment points Direct observation of group	M		
BH Day Room	BH Common Area	E7; E8; E1; E2; E3; E4; E5; E6 Day	Sprinkler heads, (Ligature)	Replace with ligature-resistant sprinkler heads Direct observation of group	M		
ED BH Patient Room	BH Dedicated Space	E8- 207, 223-246	Other attachment points (Ligature): Light over sink Mirror not flush Paper towel dispenser Metal on wall	Provide ligature-resistant devices or covers Remove attachment points One-to-one observation	H		
ED BH Patient Room	BH Dedicated Space	E8- 207, 223-246	Other attachment points (Ligature): Round lights Window knobs	Provide ligature-resistant devices or covers Remove attachment points One-to-one observation	H		
ED BH Patient Room	BH Dedicated Space	E8- 207, 223-246	Other attachment points (Ligature): Sink faucets Clothes shelf	Provide ligature-resistant devices or covers Remove attachment points One-to-one observation	H		
ED BH Patient Room	BH Dedicated Space	E8- 207, 223-246	Pictures, artwork, boards, wall mounted (Ligature, Harm): Bulletin boards in room	Secure flush to wall with tamper-resistant screws Unbreakable glass or acrylic One-to-one observation	H		
ED BH Patient Room	BH Dedicated Space	E8- 212, 242, 244	Other attachment points (Ligature): Wood cover over toilet flush piping Grab bar gap	Provide ligature-resistant devices or covers Remove attachment points One-to-one observation	H		
BH Counseling Room	BH Common Area	E8- 226 Comfort room	Window, knobs (Harm)	Seal window One-to-one observation	H		

Space	Classification	Room	Observed Potential Suicide Risk	Potential Mitigation Activities	Risk	
BH Bathroom, Corridor	BH Dedicated Space	E8- 229; E2- 265, Shower	Shelves, wall mounted (Ligature)	Remove wall mounted shelves One-to-one observation	H	
BH Patient Room	BH Dedicated Space	E8- 239, 237, 236, 234	Sprinkler heads, standard (Ligature)	Replace with ligature-resistant sprinkler heads One-to-one observation	H	
BH Tub Room, Corridor	BH Dedicated Space	E8- 248; E6; E4; E2	Tub control (Ligature)	Replace with ligature-resistant tub control One-to-one observation	H	 
BH Tub Room, Corridor	BH Dedicated Space	E8- 248; E6; E4; E2	Other attachment points (Ligature): Metal shelf Electrical outlet and tub cord Multiple points on the tub itself	Provide ligature-resistant devices or covers Remove attachment points One-to-one observation	H	 
BH Tub Room, Corridor	BH Dedicated Space	E8- 248; E6; E4; E2	Other attachment points (Ligature): Heater	Provide ligature-resistant devices or covers Remove attachment points One-to-one observation	H	
BH Tub Room, Corridor	BH Dedicated Space	E8- 248; E6; E4; E2	Tub faucet (Ligature)	Replace with ligature-resistant tub One-to-one observation	H	
BH Shower, Corridor	BH Dedicated Space	E8-220	Other attachment points (Ligature) BEING USED AS STORAGE: Shower controls Heater Door closure Door hinge Vent Seat Access panel Grab bars	Provide ligature-resistant devices or covers Remove attachment points One-to-one observation	H	 
BH Activity Room	BH Common Area	TRC	Cabinets, handles (Ligature): E219 lock and handles	Replace with ligature-resistant cabinet handles Direct observation of group	M	
BH Activity Room	BH Common Area	TRC	Ceiling, lay-in (Ligature, Contraband)	Replace with hard ceiling Glue or clip tiles in place Place motion sensor above ceiling Direct observation of group	M	
BH Activity Room	BH Common Area	TRC	Fire extinguisher cabinet, protruding (Ligature)	Provide recessed extinguisher cabinet Direct observation of group	L	

Space	Classification	Room	Observed Potential Suicide Risk	Potential Mitigation Activities	Risk	
BH Activity Room	BH Common Area	TRC	Other attachment points (Ligature): Metal shelves attached to wall with "L" bracket Metal lockers locks and latches	Provide ligature-resistant devices or covers Remove attachment points Direct observation of group	M	
BH Activity Room	BH Common Area	TRC	Other attachment points (Ligature): Wood cabinets handles Metal filing cabinets handles Partition connections	Provide ligature-resistant devices or covers Remove attachment points Direct observation of group	M	
BH Activity Room	BH Common Area	TRC	Pictures, artwork, boards, wall mounted (Ligature, Harm) White boards Bulletin boards	Secure flush to wall with tamper-resistant screws Unbreakable glass or acrylic Direct observation of group	M	
BH Activity Room	BH Common Area	TRC- 216A and B	Door closer, exposed (Ligature)	Remove door closer Direct observation of group	M	
BH Activity Room	BH Common Area	TRC- 216A and B	Door handle, standard (Ligature)	Replace with ligature-resistant door handle Direct observation of group	M	
BH Activity Room	BH Common Area	TRC- 216A and B	Faucet, standard (Ligature)	Replace with ligature-resistant faucet Direct observation of group	M	
BH Activity Room	BH Common Area	TRC- 216A and B	Hinges, standard (Ligature): Cabinet hinges	Replace with continuous hinges Direct observation of group	M	
BH Activity Room	BH Common Area	TRC- 216A and B	Other attachment points (Ligature): Paper towel dispenser	Provide ligature-resistant devices or covers Remove attachment points Direct observation of group	M	
BH Activity Room	BH Common Area	TRC- 216A and B	Screws, non-tamper resistant (Ligature, Harm)	Replace with tamper resistant screws Direct observation of group	M	
BH Activity Room	BH Common Area	TRC- 216A and B	TV, wall mounted (Ligature)	Enclose wall mount Direct observation of group	H	
BH Activity Room	BH Common Area	TRC- 216B	Ceiling, lay-in (Ligature, Contraband)	Replace with hard ceiling Glue or clip tiles in place Place motion sensor above ceiling Direct observation of group	M	
BH Activity Room	BH Common Area	TRC- 216B	Other attachment points (Ligature): Counter supported by "L" bracket Door with holes through it	Provide ligature-resistant devices or covers Remove attachment points Direct observation of group	M	

Space	Classification	Room	Observed Potential Suicide Risk	Potential Mitigation Activities	Risk	
BH Activity Room	BH Common Area	TRC- 216B	Other attachment points (Ligature): Refrigerator lock and handles Cart with a TV on it	Provide ligature-resistant devices or covers Remove attachment points Direct observation of group	M	
BH Bathroom, Corridor	BH Dedicated Space	TRC- Men and Women	Faucet, (Ligature)	Replace with ligature-resistant faucet One-to-one observation	H	
BH Bathroom, Corridor	BH Dedicated Space	TRC- Men and Women	Other attachment points (Ligature): Toilet and urinal piping box cover Hand dryer	Provide ligature-resistant devices or covers Remove attachment points One-to-one observation	H	 
BH Bathroom, Corridor	BH Dedicated Space	TRC- Men and Women	Other attachment points (Ligature): Stall door hinges Plastic on the wall Door stop	Provide ligature-resistant devices or covers Remove attachment points One-to-one observation	H	 
BH Bathroom, Corridor	BH Dedicated Space	TRC- Men and Women	Other attachment points (Ligature): Water fountain in corridor	Provide ligature-resistant devices or covers Remove attachment points One-to-one observation	H	
BH Bathroom, Corridor	BH Dedicated Space	TRC- Women	Other attachment points (Ligature): Door lock and latch	Provide ligature-resistant devices or covers Remove attachment points One-to-one observation	H	
BH Activity Room	BH Common Area	TRC-216B	Pictures, artwork, boards, wall mounted (Ligature, Harm): White boards Organization boards	Secure flush to wall with tamper-resistant screws Unbreakable glass or acrylic Direct observation of group	M	 

Risk	High	7	# Findings: 65 8	# Findings: 72 9
	Medium	4	# Findings: 43 5	6
	Low	1	# Findings: 42 2	3
		General/ Acute Care	BH Common Area	BH Dedicated Space
		CLASSIFICATION		

BEHAVIORAL HEALTH SUICIDE RISK MATRIX EXPLANATION

We have modified The Joint Commission’s SAFER Matrix to reflect suicide risk by plotting the likelihood of harm (H=high, M=medium, L=low) on the Y axis against the type of setting on the X axis. The setting itself may determine the likelihood of harm of some risks. The number of findings in a particular box in the matrix is represented by the number in the upper right corner of the box.

All suicide risks would be scored by The Joint Commission at EC.02.06.01 EP 1.

Types of settings are as follows:

Behavioral Health Dedicated Space: This is the highest risk space in areas dedicated to behavioral health, whether in an inpatient unit or dedicated space in an emergency department. Dedicated space includes patient rooms and corridors. Patients in these areas may not always have direct supervision. All risks in these areas are expected to be removed or mitigated with one-to-one observation.

Behavioral Health Common Areas: These are areas within dedicated behavioral health units in which patients are not without supervision, such as dining areas, group rooms, day rooms, etc. Risks in these areas are to be documented and removed or mitigated as feasible.

General/Acute Care Areas: These are areas of the organization that are typically used by the non-behavioral health population, such as a general medical/surgical unit, intensive care unit, or a typical emergency department treatment room or bay. Risks in these areas are to be identified and those risks that are removable must be documented and removed when the space is occupied by a behavioral health patient. All remaining risks are to be mitigated by one-to-one observation.

NOTE: In outpatient behavioral health settings, patients are expected to be screened as to the appropriateness of the setting, therefore suicide risks are not scored in these settings.

Thank You!

General Recommendations

Note 1: This assessment is only for the foot print of the building and does not include the exterior or any attachment to the exterior of the building. The grounds and any structure on the grounds are also not included.

Note 2: S-3 is under remodel. The assessment was done on what was completed at the time of the assessment.

Note 3: This assessment is to identify, at the organization's request, as many ligature and self harm points in areas where the patient has access, whether they are observed, accompanied, or unaccompanied. The organization will then determine their own risk for these areas.

Note 4: All elevator vestibules that patients access have in common: door bell, fire alarm and conduit, sprinkler head, some have a wall mounted phone with cord, and door handle and exposed door closure and hinges.

Note 5: All TV consoles have the same issues with the door hinges, door latch and lock, strip across the top of the door.

Note 6: All patient rooms have the same issues with the clothes locker: long front panel, shelves have gaps, lower smaller shelf can be removed and used as a weapon as can the lower cabinet door, shelf brackets have gaps, top angle piece of locker is not flush to the wall, and built-in desk mounting brackets have gaps.

Note 7: Due to so many similar findings the pictures attached may not be the exact picture but, due to similarities represent the findings in kind.

Note 8: The following rooms have been in use: not being used.

Note 9: This risk assessment was performed to identify as many ligature risks as possible. No environment can be totally ligature resistant, therefore as many potential ligature points were identified as possible.

Thank you for partnering with RPA and MSL Healthcare. Please contact me if you have any questions.



Troy Martin
tmartin@mslhealthcare.com